

ISSY //

# Z8 BUTTERFLY SHAVING CABINET



Named for its signature Zuster-designed “Butterfly” handle, ISSY Z8 Butterfly pays homage to craftsmanship and bespoke design with a series of cleverly integrated luxuries. The ISSY Z8 Butterfly Shaving Cabinet features two - four internal shelves and the ability to open the end mirrors inwards for the Triple Shaving Cabinet, giving you a round vision view of your hair and make up. The Z8 Butterfly Shaving Cabinet can also be customised, allowing you to achieve your ultimate designer look.

Designed and Manufactured in Australia

## SPECIFICATIONS

Recommended use	Domestic, Commercial & Hotel
Materials	Backing - American Oak Veneer Frame & Edging Detail -Solid American Oak Mirror - 4mm Australian Made Safety Mirror
Timber Colours	American Oak, Charcoal Oak, Pony Oak , Hazelnut Oak
Fixing	Bolted / Screwed to Wall by a Licensed Trades Person
Features	2 - 4 Adjustable Shelves



To see the complete ISSY range go to [www.reece.com.au/bathrooms](http://www.reece.com.au/bathrooms)

STANDARD SIZES	SHAV500	SHAV700	SHAV1000	SHAV1500	SHAV1800
Width (mm)	500	700	1000	1500	1800
Depth (mm)	150	150	150	150	150
Height (mm)	930	930	930	930	930
Doors	1	1	2	3	3

CUSTOM SIZES	SHAV400-600	SHAV701-900	SHAV901-1200	SHAV1201-1600	SHAV1601-1799	SHAV1801-2000
Width (mm)	400-600	701-900	901-1200	1201-1600	1601-1799	1801-2000
Depth (mm)	150	150	150	150	150	150
Height (mm)	680-980	680-980	680-980	680-980	680-980	680-980
Doors	1	1-2	2	2-3	3	3

## CLEANING RECOMMENDATIONS

Your timber frame should be cleaned with a mild, non acidic, non abrasive detergent and soft cloth . Finish by cleaning off detergents with a soft damp cloth and towel dry. Always clean spills and water immediately.

Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.


Tech Page Version 2

# ISSY //


## Z8 BUTTERFLY SHAVING CABINET

COLOUR OPTIONS


### TIMBER OPTIONS

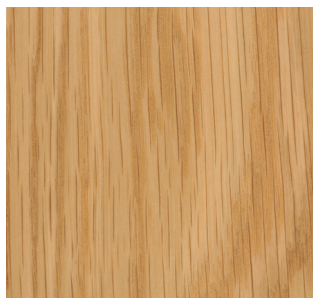


AMERICAN OAK

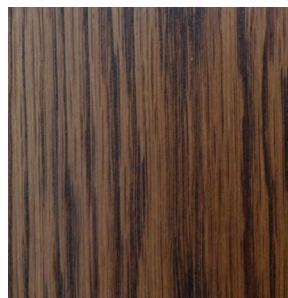


HAZELNUT OAK

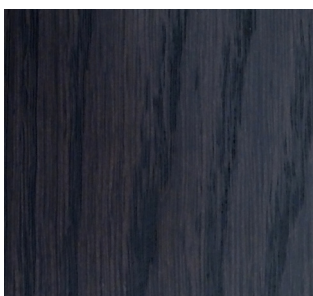

PONY OAK

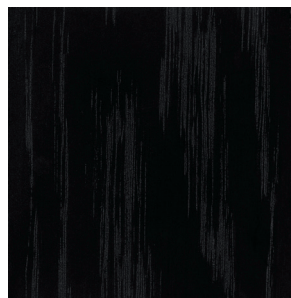


CHARCOAL OAK

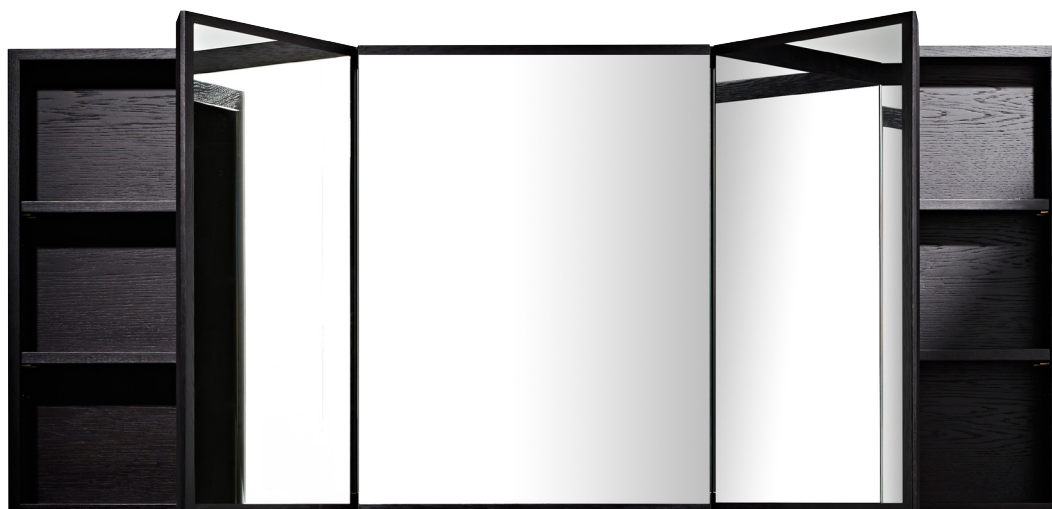


Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

# ISSY // Z8 BUTTERFLY SHAVING CABINET


## STANDARD SIZES -150 DEEP

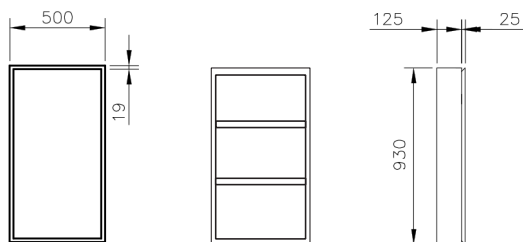


500W X 150D X 930H

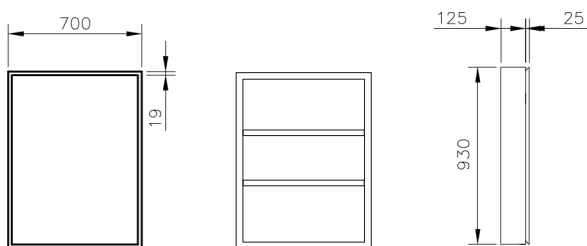


700W X 150D X 930H

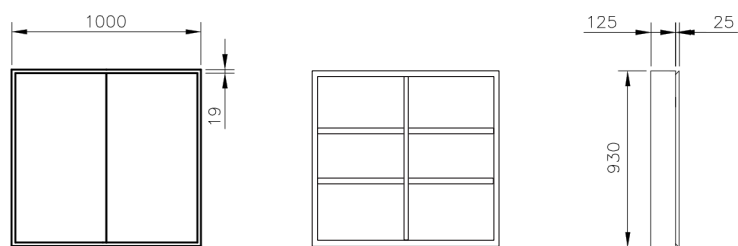

1000W X 150D X 930H

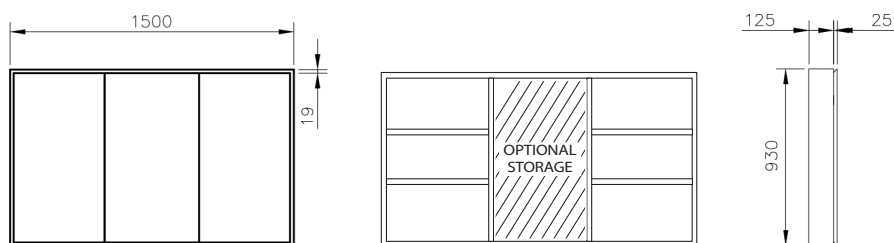


1500W X 150D X 930H

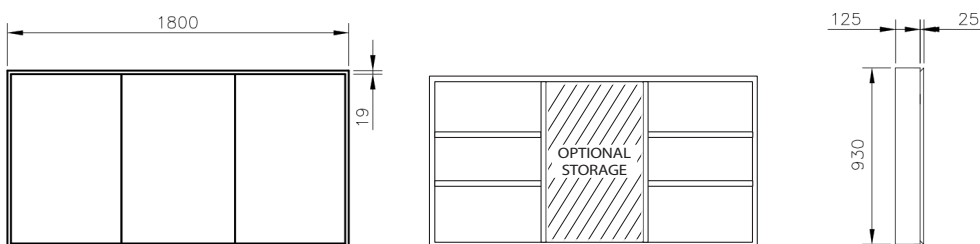


1800W X 150D X 930H

# ISSY // Z8 BUTTERFLY SHAVING CABINET


CUSTOM SIZES - 150 DEEP

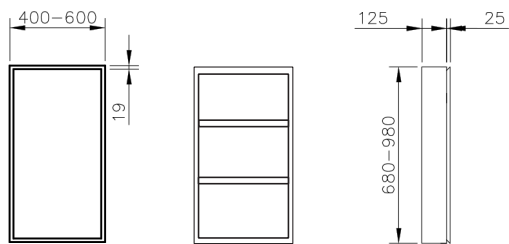


400-600W X 150D X 680-980H

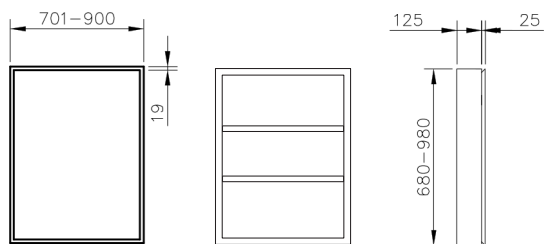


701-900W X 150D X 680-980H

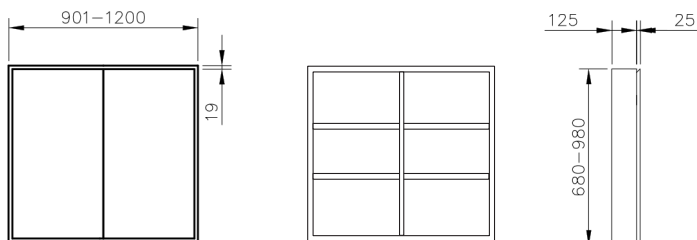


901-1200W X 150D X 680-980H

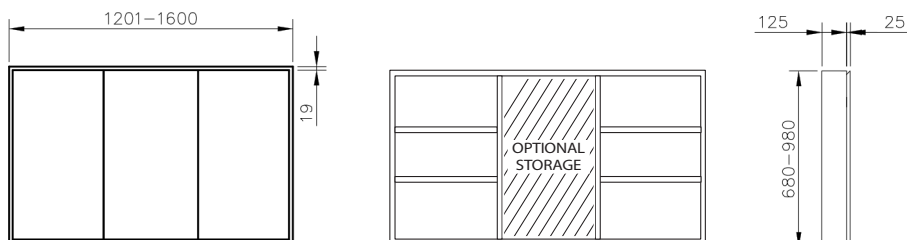

1201-1600W X 150D X 680-980H

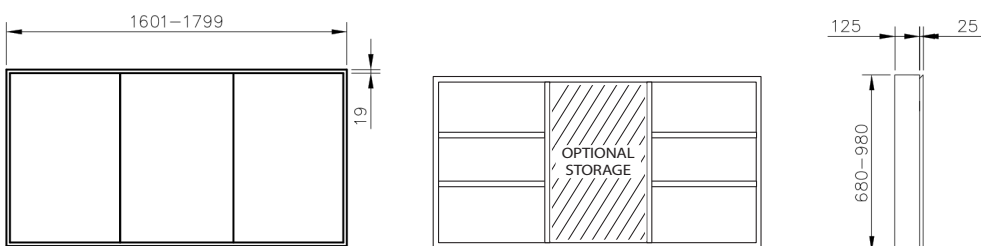

1601-1799W X 150D X 680-980H

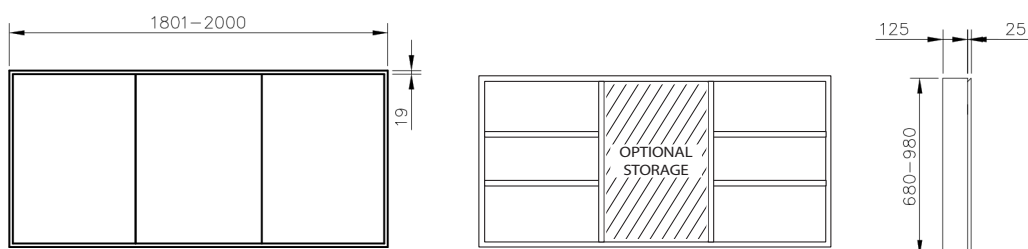

1801-2000W X 150D X 680-980H

# ISSY //

## Z8 BUTTERFLY SHAVING CABINET

### INSTALLATION INSTRUCTIONS

Mirror should be installed by a qualified, licensed trades person.


#### Cabinet Fitting Instructions

• Prior to installation it is important to inspect the Z8 Shaving Cabinet to ensure no damage has occurred in transit. If damage has occurred, or a visible defect exists, DO NOT proceed with installation and advise supplier immediately. No warranty claim for damage will be accepted if the Cabinet is installed. This includes scratches to the glass.

• It is recommended that the mirror is protected during installation.

Please Note: Manufacturer will not be liable for the cost of installation or removal of the mirror and the warranty will be voided if damage occurred during or after installation.

- Find studs on wall of installation and mark them so they can be seen when cabinet is in place.
- Place cabinet in position to be installed, It is recommended installation is assisted with stands.
- Ensuring unit is level, screw through anywhere of the back of the unit into studs.
- You can also use silicon to mount the mirror permanently. ENSURING SCREWS ARE FIXED TO STUDS. Allow enough fixing points at the top and bottom of the back panel to sufficiently secure the unit to the wall.

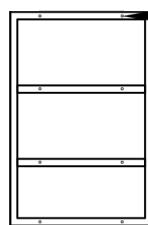

Installation holes hidden by Adj. Shelves